


COOKTOP PARTS

For Models: TES325EW0
(White)

30" ELECTRIC FREESTANDING
SELF CLEAN RANGE

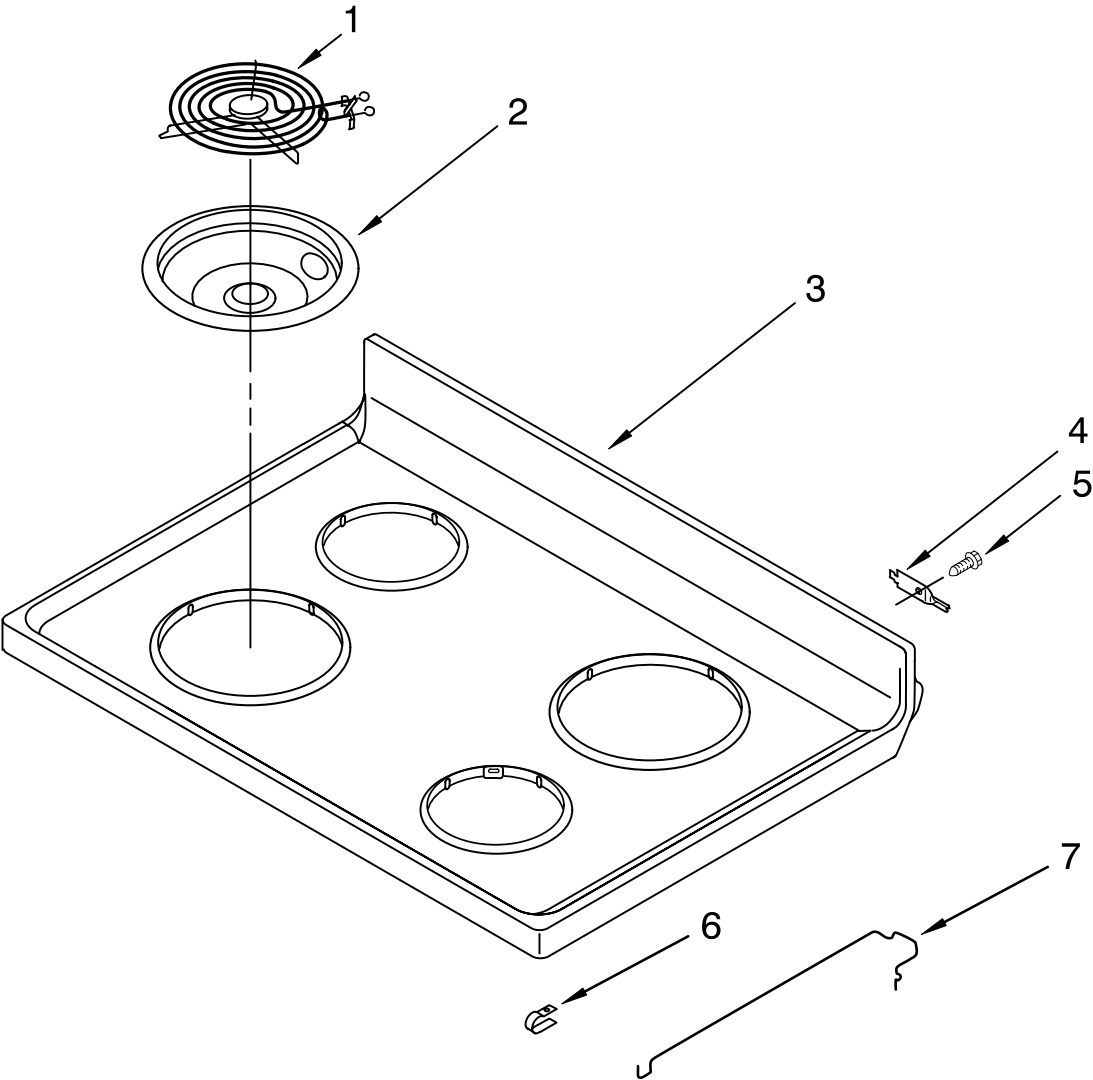


Illus. No.	Part No.	DESCRIPTION
1		Element, Surface
	3196681	6" (2)
	3196679	8" (2)
2		Bowl, Drip
	3195208	6" Chrome (2)
	3195209	8" Chrome (2)
3		Cooktop
	3186231	White
4	3195060	Hinge, Cooktop (2)
5	3196178	Screw (2)
6	308605	Strain Relief
	3196178	Screw
7	3195812	Rod, Support (2)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: TES325EW0
(White)

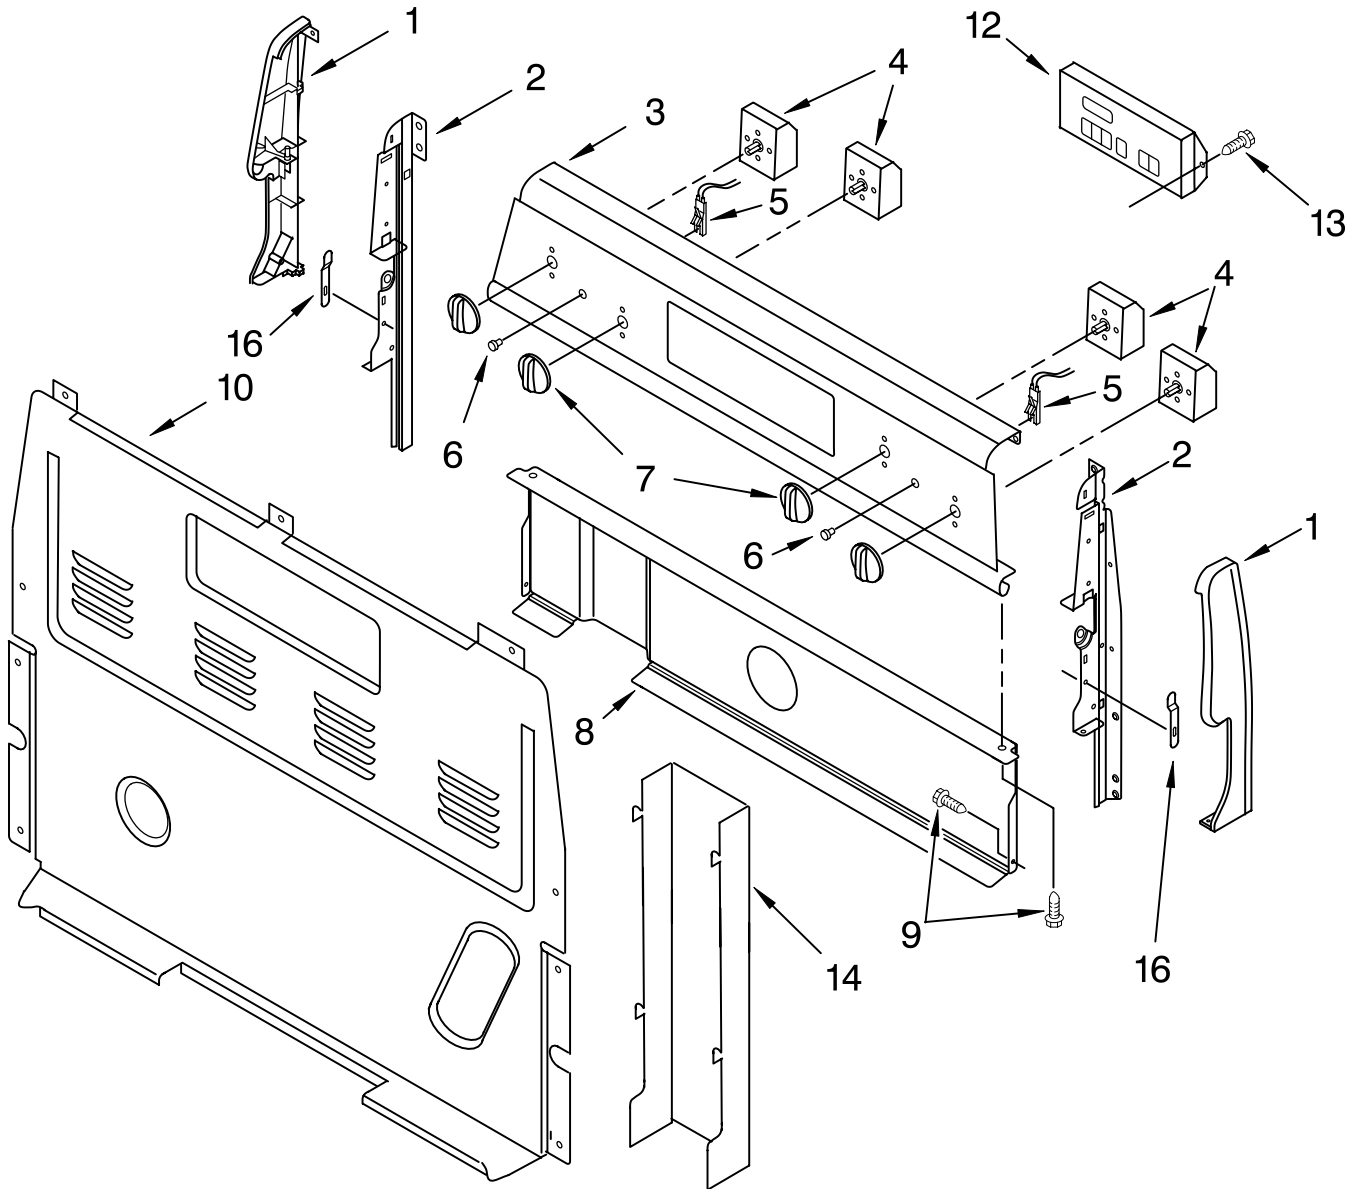

Illus. Part
No. No. DESCRIPTION

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1 Endcap
3186188 Left Hand
3186189 Right Hand
2 Support, Endcap
3186198 Left Hand
3186199 Right Hand

Illus. Part
No. No. DESCRIPTION

3 3195359 Panel, Console
4 Switch, Infinite
3148953 Left Front
3148951 Left Rear
3148953 Right Rear
3148951 Right Front
3196171 Screw (8)
5 313102 Light, Ind. (2)
6 3196068 Lens, Light (2)


Illus. Part
No. No. DESCRIPTION

7 3196231 Knob, Infinite (4)
8 3196083 Shield, Heat
9 4449746 Screw (4)
10 3195163 Cover, Upper
3196178 Screw (9)
12 3196503 Control, Range
13 3196178 Screw (2)
14 3195133 Cover, Box
3196178 Screw (2)
16 3196200 Clip, Spring (2)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: TES325EW0
(White)

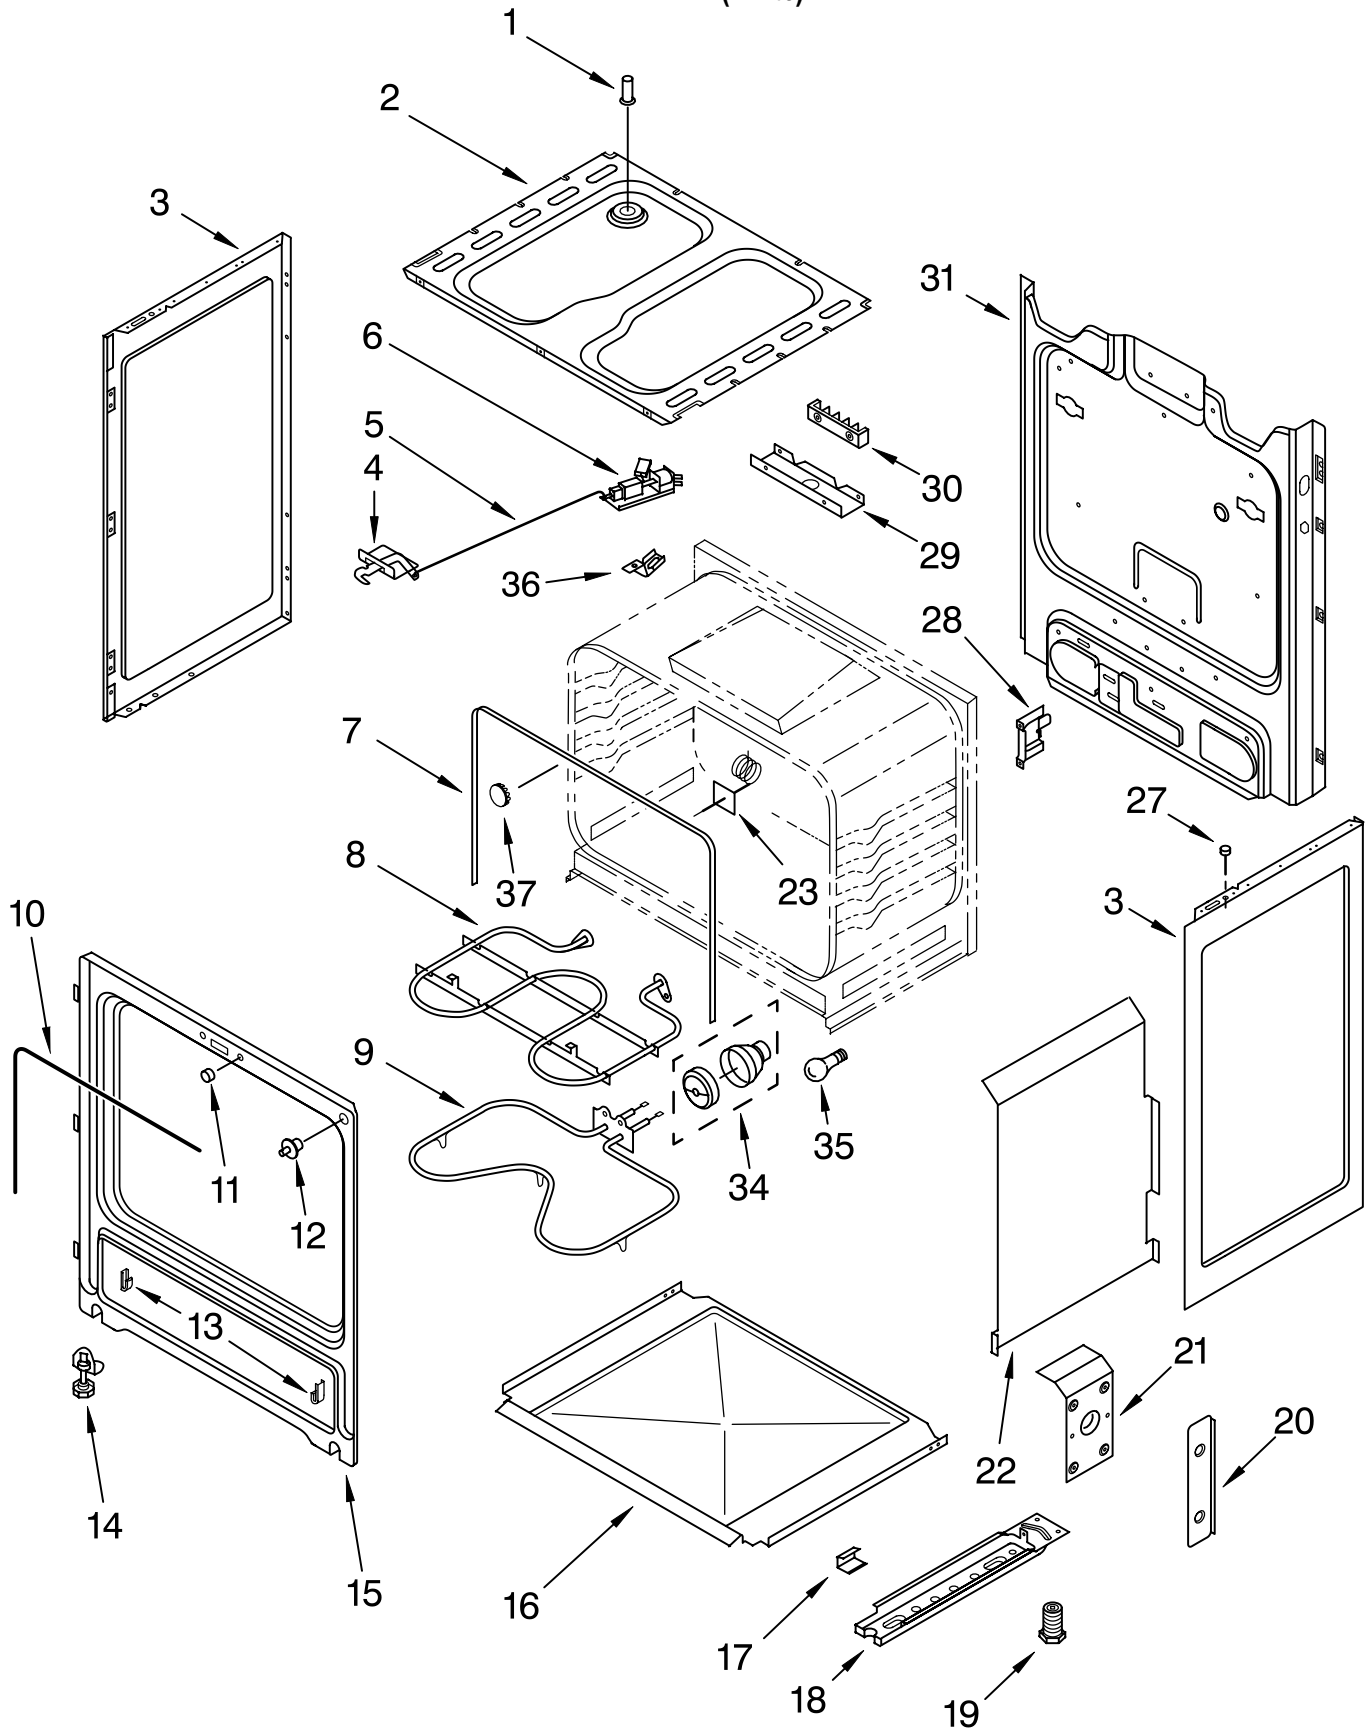

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: TES325EW0
(White)

Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.		
1	3169108	Tube, Oven Vent
	3196567	Screw (2)
2	3186144	Box, Burner
3		Panel, Side (2)
	3186073	White
4	3196119	Latch, Door
	3196168	Screw (2)
5	3196715	Rod, Latch
6	3196125	Solenoid Assy.
	3196178	Screw (2)
7	3195737	Seal, Oven Flange
8	3195063	Element, Broil
	3196174	Screw (4)
9	3195067	Element, Bake
	3196174	Screw (2)

Illus. No.	Part No.	DESCRIPTION
10	3195023	Seal, Oven Door
11	3196392	Spacer, Door
12	3196262	Switch, Door
13	3195546	Glide, Drawer (2)
	3196165	Screw (2)
14	3196037	Foot, Front (2)
	3196179	Screw (4)
	3196178	Screw (2)
15	3186156	Frame, Front
16	3186145	Tray, Insulation
17	3196576	Clip, Panel (6)
18	3186055	Rail, Base (2)
	3196178	Screw (6)
19	312701	Foot, Rear (2)
20	3196091	Shield, Outer (2)
	3196177	Screw (4)
21	3196092	Shield, Inner (2)
	3196177	Screw (2)
22	3195717	Retainer, Side (2)
	3196178	Screw (4)


Illus. No.	Part No.	DESCRIPTION
23	3148440	Sensor, Oven
	3196178	Screw (2)
27	3195809	Bumper, Side (2)
28	3186116	Support, Oven (2)
	3196165	Screw (4)
29	3186034	Bracket, Service
	3196178	Screw (2)
30	4449868	Block, Terminal
	3196163	Screw (2)
31	3195707	Back, Main
	3196178	Screw (2)
36	3169573	Ground Strap
	112432	Nut (3)
37	3196439	Button, Plug (2)

INSULATION

3195037	Insulation, Wrap
3186148	Insulation, Back

DRAWER & BROILER PARTS

For Models: TES325EW0
(White)

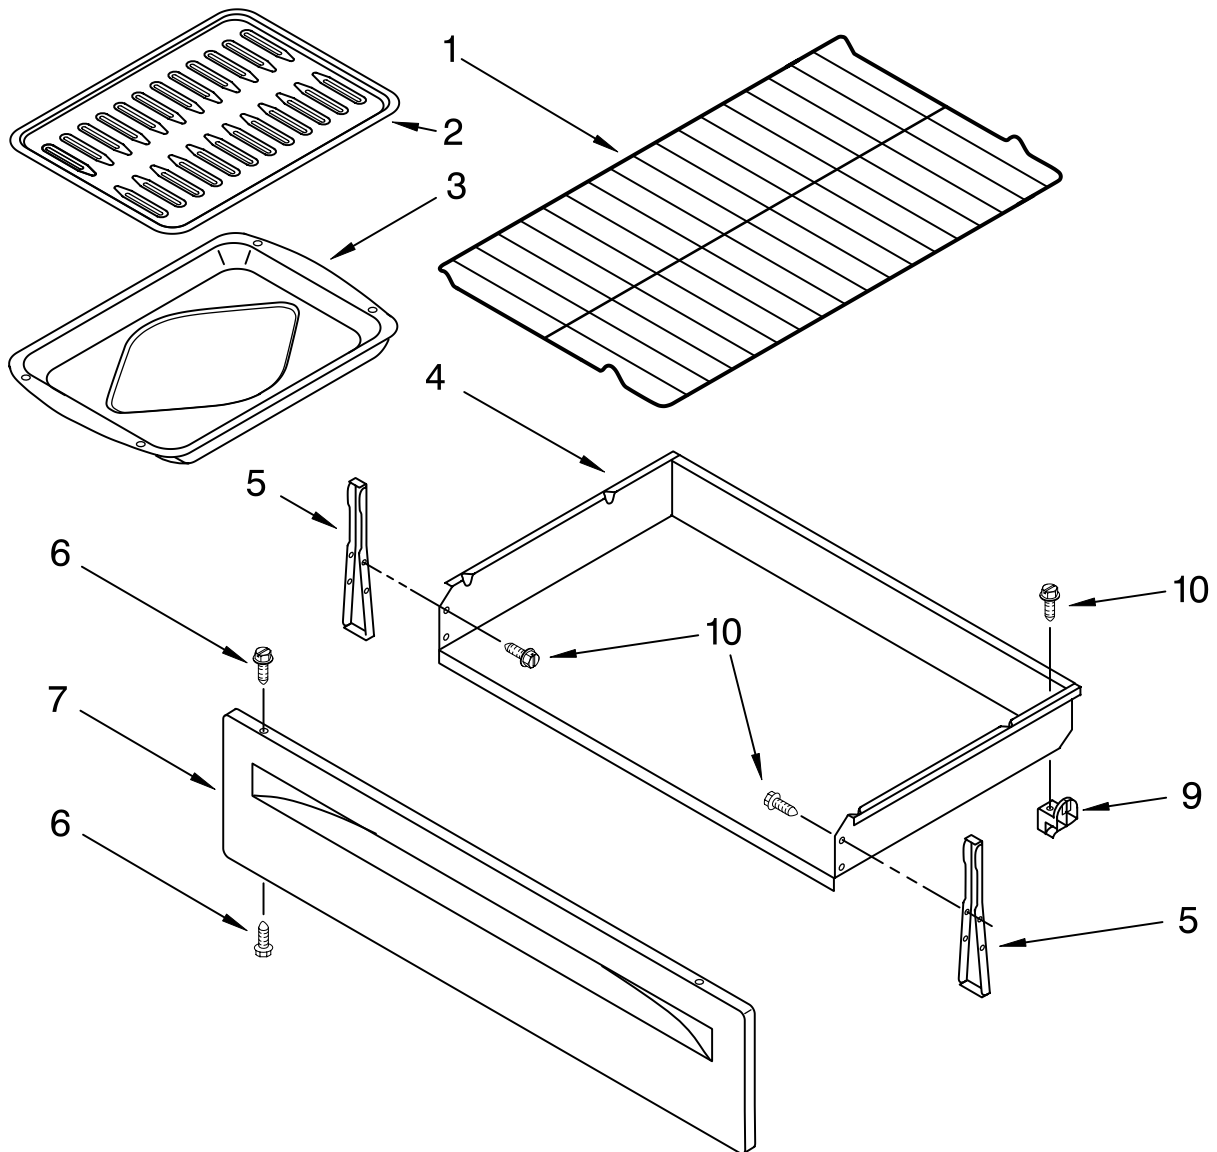


Illus. No.	Part No.	DESCRIPTION
1	3195710	Rack, Oven (2)
2	3195996	Grill, Broiler
3	3196076	Pan, Broiler
4	3186096	Drawer, Storage
5	3186098	Bracket, Drawer(2)
	3196168	Screw (4)
6		Screw, Panel (2)
	3196558	White
7		Panel, Drawer Frnt
	3186101	White
9	3195062	Glide, Drawer (2)
10	3196168	Screw (8)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: TES325EW0
(White)

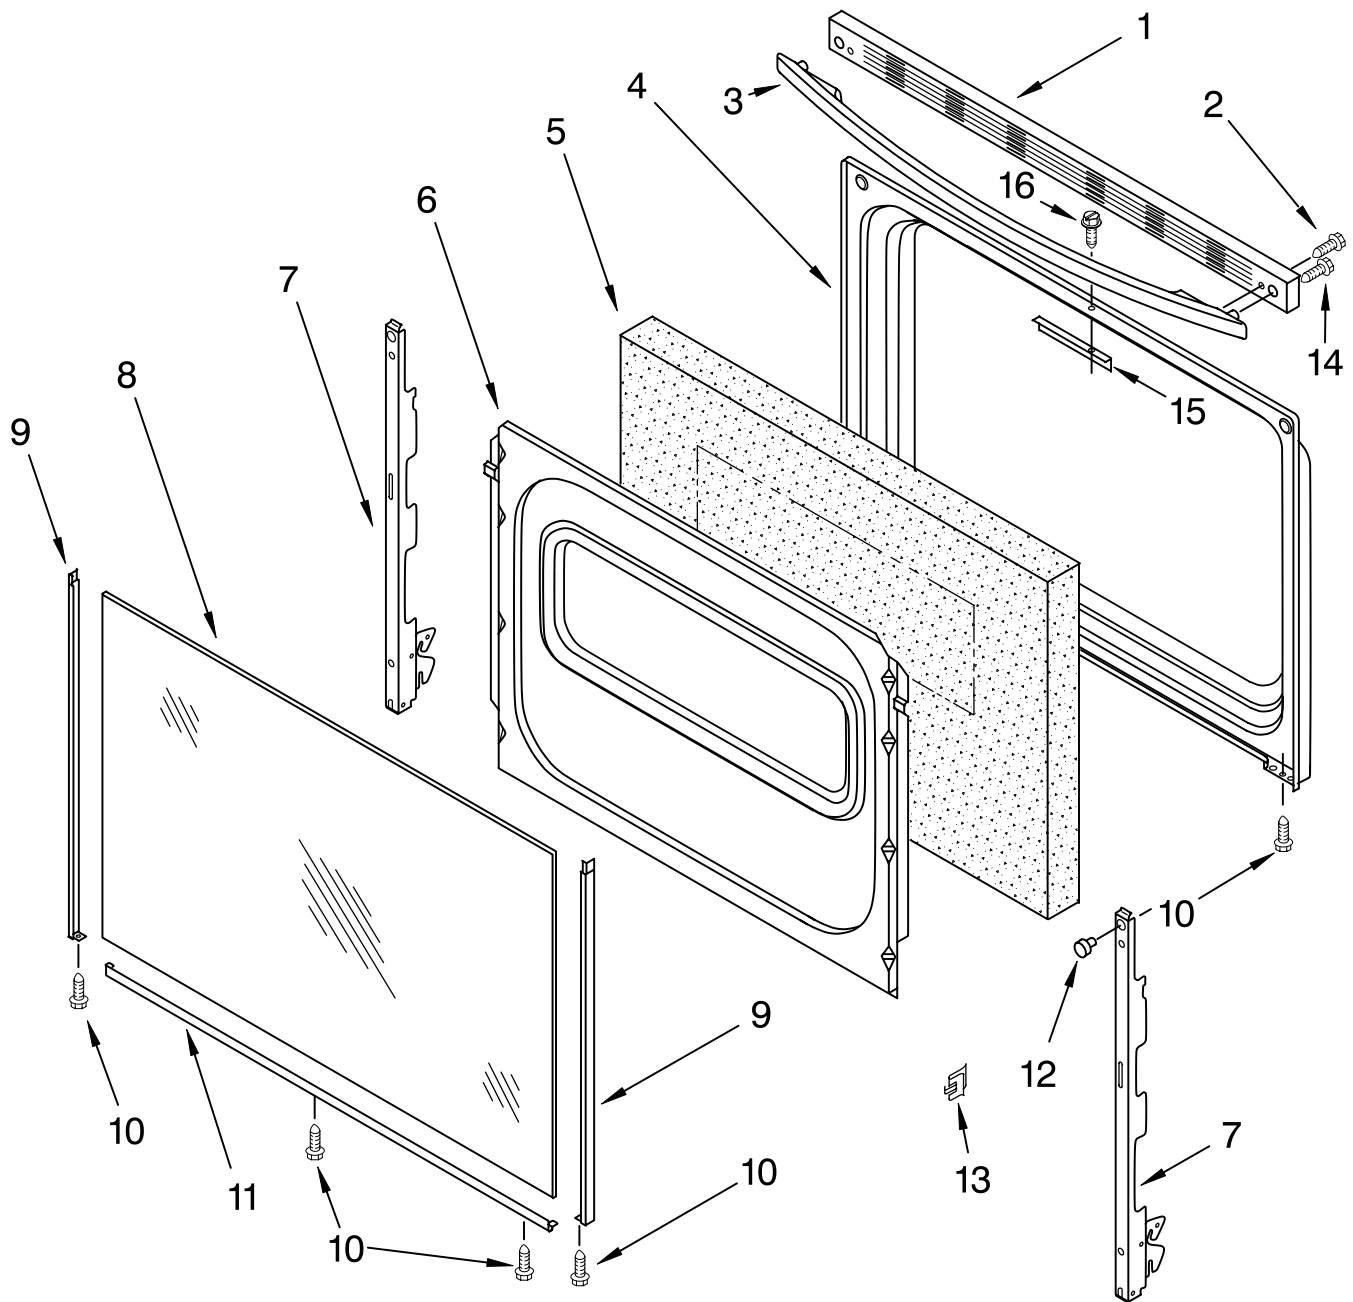

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	3195605	Trim, Top	7	3196073	Hinge, Door (2)	11	3195424	Trim, Bottom
2	3196164	Screw (2)	8	3195610	Glass, Outer Door	12	3195809	Bumper (2)
3	3195922	Handle, Door	9	3195976	Trim, Door Side	13	3196025	Clip, Door Glass
4	3186294	Liner, Door		3195973	Left Hand	14	3196161	Screw, Handle (2)
5	3186256	Insulation, Door			Right Hand	15	3195914	Bracket, Latch
6	3186298	Retainer, Insul.	10	3196160	Screw (9)	16	3196168	Screw (2)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MISCELLANEOUS PARTS

For Models: TES325EW0
(White)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

Following Parts Not Illustrated

SPLICING WIRES--25FT.

LENGTH

242828	Wire, Black	12 Ga. 150° c
242820	Wire, Black	14 Ga. 150°c
242821	Wire, Blue	14 Ga. 150°c
242822	Wire, Brown	14 Ga. 150°c
242830	Wire, Brown	14 Ga. 200°c
242823	Wire, Green	14 Ga. 150°c
242824	Wire, Orange	14 Ga. 150°c
242829	Wire, Red	12 Ga. 150°c
242825	Wire, Red	14 Ga. 150°c
242831	Wire, Red	14 Ga. 200°c
242826	Wire, White	14 Ga. 150°c
242827	Wire, Yellow	14 Ga. 150°c
242832	Wire, Yellow	14 Ga. 200°c

REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch-Up Self-Clean(1/2 Pt)
261582	Grease

INSULATION

261514	Insulation, Fiberglass (1-1/2" x 24" x 120")
240132	Insulation, Fiberglass (2-1/2" x 22" x 120")

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

PAINT, TOUCH-UP (1/2oz.)

72017	White
72107	Almond
72109	New Avocado
72108	Coffee
72110	Harvest Gold
72112	Toast
72113	Platinum
**511873	White Porcelain (2 Oz.)

PAINT, PRESSURIZED SPRAY (13 oz.)

350930	White
350956	Almond
261888	New Avocado
261886	Coffee
261890	Harvest Gold
285365	Toast
285366	Platinum
285006	Superior Black
206922	Primer (White)

PAINT, BULK (1 qt.)

799344	White (Uncut)
978883	Almond (Uncut)
261891	Harvest Gold (Uncut)
285367	Toast (Uncut)
285368	Platinum (Uncut)

ACCESSORY PARTS

241430	Foil, Aluminum Oven (18" x 25')
3184478	Cleaner, Glass

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

ANTI-TIP KIT

3176830	Anti-Tip Kit
---------	--------------

LITERATURE PARTS

LIT3195944	Instructions, Installation
LIT3195945	Installation Instr (Templet)
LIT3196283	Guide, Use & Care
LIT3196147	Tech Sheet

WIRING HARNESS PARTS

3196155	Harness, Wire (Cooktop)
3196520	Clip, Wire Harness
3195193	Harness, Wire (Main)
3196696	Clip, Wire Harness
3196108	Harness, Wire (Door Switch)
311227	Wire, Ground
313660	Clip, Ground Wire
3196173	Screw
3196154	Screw, Ground

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST